16 LATCH HARDWARE REPLACEMENT

STEP 1

Open the latch your Parakeet (J) and fully extend the latch

STEP 2

Insert a precision flat blade screwdriver into one of the chanels in the locking clip (W) on the back of the latch.






STEP 3

Insert the security bit into the tamper-resistant screw (B) on the latch. Turn the screwdriver with the inserted security bit counterclockwise while holding the precision flat blade screwdriver and the locking clip (W) in place to remove the screw. The locking clip will now be removable.



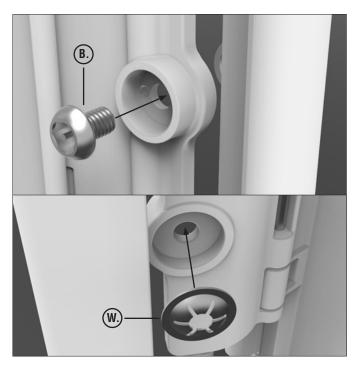

16 LATCH HARDWARE REPLACEMENT

STEP 1

With the latch your Parakeet (J) open and fully extend, place the new locking clip (W) onto the brass threaded insert (X) on the back case of Parakeet, dome side towards the threaded insert.



STEP 3

Thread the tamper-resistant screw (B) through the latch, locking clip (W) and brass threaded insert (X) and tighten until snug.



STEP 2

Fold the latch over and ensure that the open hole of the latch lines up with the locking clip (W) and threaded insert (X). Close the latch.



STEP 4

Once snug, turn the screw counterclockwise until it releases from the brass threaded insert and opens the unit.

