

RightPath

# SAFETYRAIL

Pedestrian Barricade

— BUSHING REPLACEMENT INSTRUCTIONS —



**CONTACT:**

Call 800.662.6338 to talk to a Customer Service Representative.

**HOURS:**

8 AM to 5 PM (E.T.)  
Monday through Friday



# SAFETYRAIL™ BUSHING REPLACEMENT

## BUSHING REPLACEMENT

### PARTS NEEDED FOR RAPIDRAMP BUSHING REPLACEMENT




Part A.  
SafetyRail Upright  
Quantity - 1



Part B.  
SafetyRail Bushing  
Quantity - As Needed

### TOOLS REQUIRED - FLAT-BLADED SCREWDRIVER

#### STEP 1

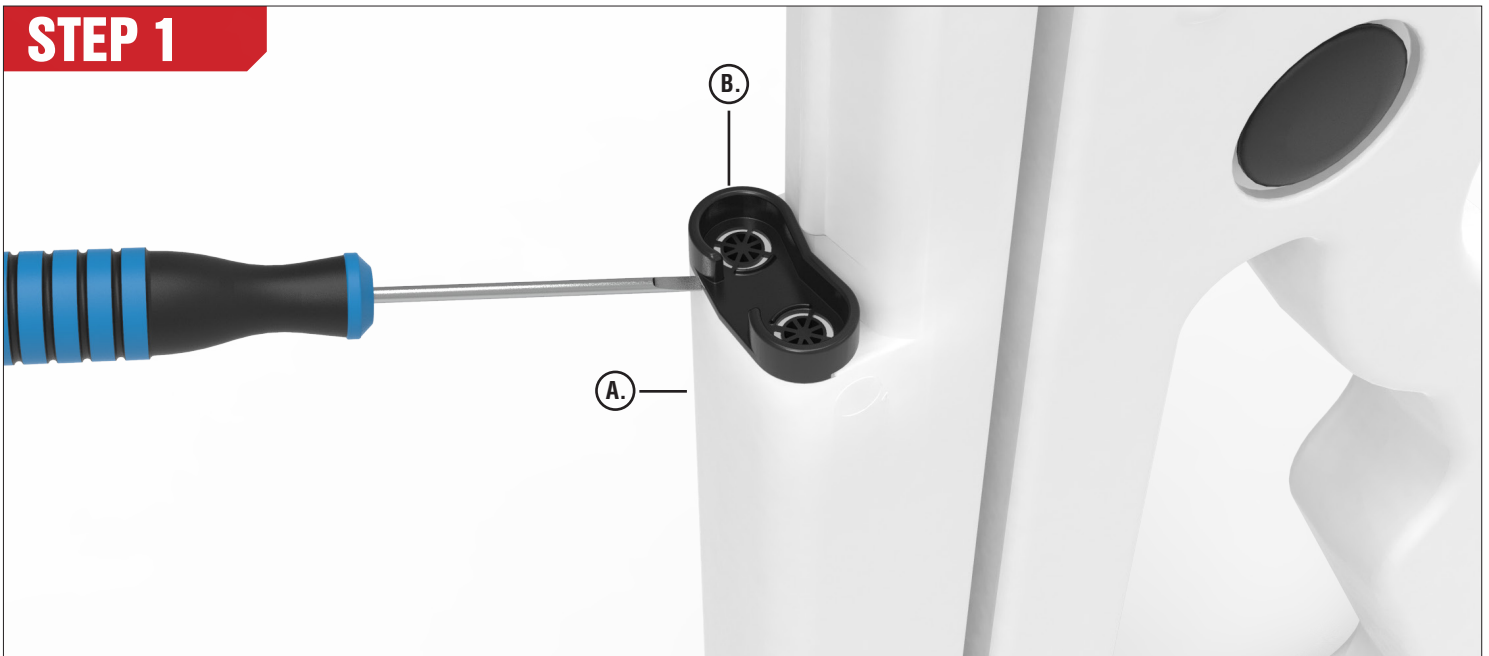

If damaged **bushing (B)** is still in place, remove by prying the barbed protrusions from the drilled holes of the **SafetyRail upright (#A)**.

# SAFETYRAIL™ BUSHING REPLACEMENT

## STEP 2



Align the new **bushing** (B) with barbed protrusions facing the drilled holes in the **SafetyRail upright** (A). **Note:** Be sure that the opening in the ridge on the bushing is facing outward.

## STEP 3



Apply pressure with thumbs on the top of the **bushing** (B) until you hear it click into place. Tug at bushing to ensure it is properly locked in.





**CONTACT:**

Call 800.662.6338 to talk to a Customer Service Representative.

**HOURS:**

8 AM to 5 PM (E.T.)  
Monday through Friday

Follow us on:



We are a proud member of:

